

How to fit and operate your Child Safe Roller Blind



Pack Contents...

Please check you have all the items that are supplied with your Child Safe Roller blind.


Idle End Bracket: 1



Drive End Bracket: 1



Blind: 1

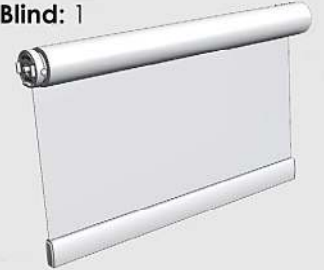

Fitting your Roller Blind

Important, please ensure you have your fitting brackets before you begin these are different styles for each end of the blind.

You can fit your Roller blind in the following easy steps. Please ensure you complete them in order to ensure correct installation of your blind.

Fitting Your Roller Blind

1 Fitting your Child Safe Roller blind outside the window recess


Please ensure the middle of the blind is precisely in the centre of your window.

If you need to calculate (X)

- Measure the width of the window (measurement Y) note down this figure.
- Measure the width of the Roller blind (measurement Z) note down this figure.

Take measurement Y away from measurement Z and divide the figure by 2 to get measurement X.

Now follow step 2 then please follow the instruction for **Face Fixing**.

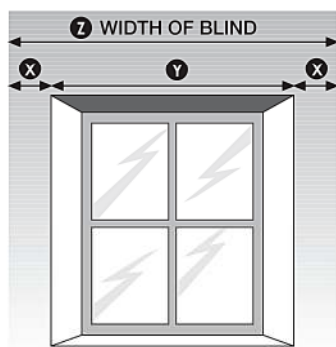

TOP FIX FACE FIX


Fitting your Roller blind inside the window (recess fitting)

You must decide whether to **Face Fix** or **Top Fix** your Roller blind.

- **Top Fix** your Roller blind if you have uPVC window frames or there are obstructions like handles.
- **Face Fix** your Roller blind if you want to fit your installation brackets to the window frame.


2 Measure the width of the Roller blind fabric (measurement W) in mm as shown in the image below.

Now position the idle end bracket on the right hand side and the drive end bracket on the left hand side making sure the distance between the inside of the brackets is 30mm wider than the measurement W. ($W + 30\text{mm} = D$)

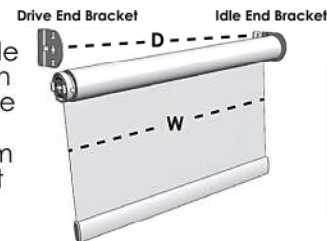

Take care to ensure the fixing brackets are level.

Now mark two fixing holes (H) for each bracket with a pencil and attach using appropriate fixings for your wall construction.

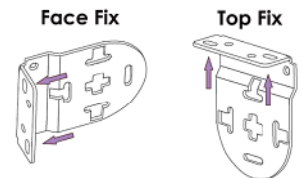


3 Locate the pin on the right hand side of the blind in the Idle End Bracket ensuring the blind is fully-wound. Push gently to compress the spring and locate the lugs on the left side of the blind in the Drive End Bracket.

Please ensure the This Way Up Arrow is pointing to the ceiling.



Now release the Locking Pin (P) but do not pull all the way out. Your blind has been pre-tensioned and is now ready to use.

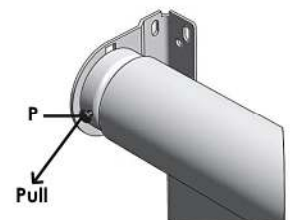

Operating Your Child Safe Roller Blind

**Operating your Roller blind is simple.
Just follow the instructions below.**

To operate your Roller blind hold the bottom bar (or the toggle if chosen) and gently pull the blind down until the required drop position and let the blind rise slightly until the lock catches. To raise the blind pull down on the blind until the lock releases and let it rise to your chosen stop position.

WARNING : NEVER RELEASE YOUR BLIND UNTIL THE LOCK CATCHES, DOING SO WILL ENABLE THE BLIND TO RISE UNCONTROLLED AT SPEED TO THE TOP POSITION

Note : Should the blind not rise completely or too slowly re-tensioning of the spring may be required. To re-tension the spring lower the blind to approximately 250mm from its top position and release slightly so the lock catches. Push in the Locking Pin (P) and gently remove the blind. Now carefully roll the fabric back onto the blind until you are in the fully-wound position. Now re-fit the blind as detailed in Section 3 and the blind should operate correctly.